




# APPLIANCES



## DISHWASHER

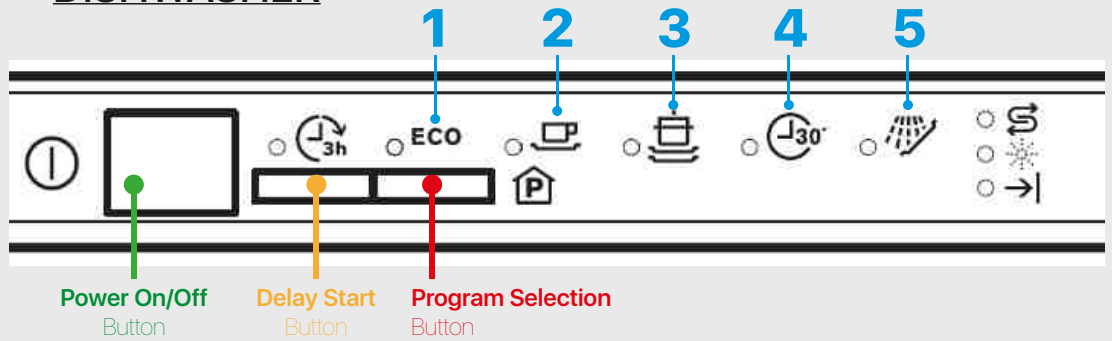

- 1) Load dishes into the basket
- 2) Put the detergent in the designated compartment
- 3) Press the **Power On/Off button**
- 4) Select the **PROGRAM** using the corresponding button
- 5) The dishwasher will start automatically when the door is closed
- 6) At the end of the program, the door will open automatically and remain slightly ajar

### PROGRAMS:

- 1) ECO: Normal dirt, soak + wash at 50°C, duration 227 min.
- 2) Normal dirt, soak + wash at 65°C, duration 90 min.
- 3) Intense dirt, soak + wash at 70°C, duration 160 min.
- 4) Fresh dirt, wash at 60-65°C, duration 30 min.
- 5) Soak, duration 15 min. DO NOT USE detergent with this program

## WASHING MACHINE

