## TOWEL WARMER







In the bathroom of each apartment, there is an electric towel warmer with a digital timer.

Please use the device RESPONSIBLY. Avoid leaving it constantly on throughout the day.

Contact the staff for any scheduling of operating hours.



- 1. Turn on the device by pressing the **ON/OFF** button
- 2. Select the desired function by repeatedly pressing the button **PROG.**:
  - Manual Mode

After turning on the device with the **red**, button, select the temperature using the **+** and **-** buttons.

Night Mode

Set the nighttime operating temperature (+ and -).

- Anti-freeze mode

Set the minimum activation temperature (+ and -).

- **2h** Timer Mode 2h

This function allows you to activate the device for 2 hours, after which the device will automatically turn off.

Use this FUNCTION to DRY the TOWELS.

To activate the function, simply press the **green** button until the 2h icon appears.

- Weekly Programming



**WARNING:** Covering the hot surface with fabrics (towels, clothes, etc.) for an extended period may cause fading of the fabric and/or color transfer to the device.