## WATER HEATER





Each apartment is equipped with an independent system for producing hot water for domestic use.

The boiler is electric and is located in the two-door cabinet in the entrance, together with the washing machine.

The water heater is set to the "Memory" function, designed to optimize comfort by monitoring the hot water demand from the users. Therefore, **please do not adjust the device settings** and, if necessary, contact the staff.

If a significant hot water consumption is expected, greater than usual, you can temporarily activate the **BOOST function**.

- 1. Press the **BOOST** button. The corresponding button will light up in blue (>>).
- 2. Set the temperature (60-70°C) using the and + buttons.

The boiler will rapidly heat the water to the set temperature. Once reached, the BOOST function will automatically deactivate, and the blue LED light (>>) on the button will turn off.

